


# Replacement Parts List

## 40B Shortstub™

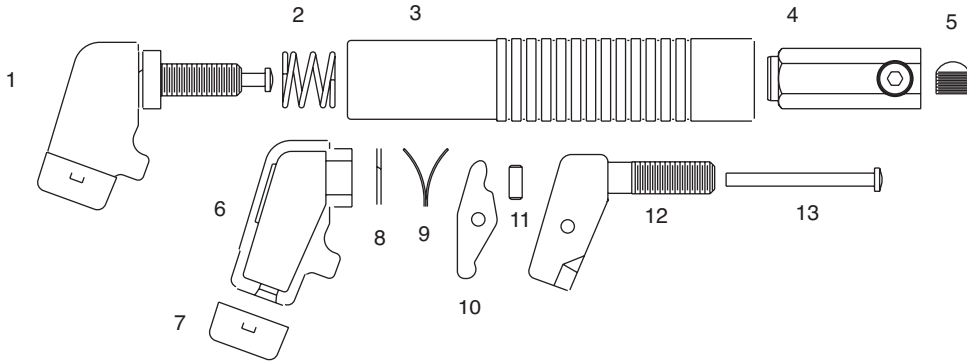

1. Head Assembly	K40	9. V Jaw Spring	V4
2. Coil Spring	S5	10. Jaw	J4
3. Handle (molded)	MH4	11. Jaw Pin	JP4
4. Connector Body	B37	12. Head	H4
5. Ball Point Set Screw	B33	13. Pressure Pin	PP4
6. Head Insulator (Pair)	EL		
7. Boot	BB4		
8. Snap Ring	SR4		